

Following are the steps changing the Wireless password and/or Network Name:

*Note: For best results, if possible connect the device directly to the router via Ethernet cable.

Step 1: Access the modem

Open a browser, and navigate to 192.168.1.1



A prompt for username and password will appear.
By default, username is 'admin' and password is 'admin'



Step 2: Access Wireless Settings


Once logged in, Choose 'Interface Setup' on the top menu, Choose 'Wireless' under the sub-menu.



To view/change the current wireless password

Confirm 'Authentication Type' is set to 'WPA-PSK/WPA2-PSK'

To change, enter the new password in the textbox labelled 'Pre-Shared Key'

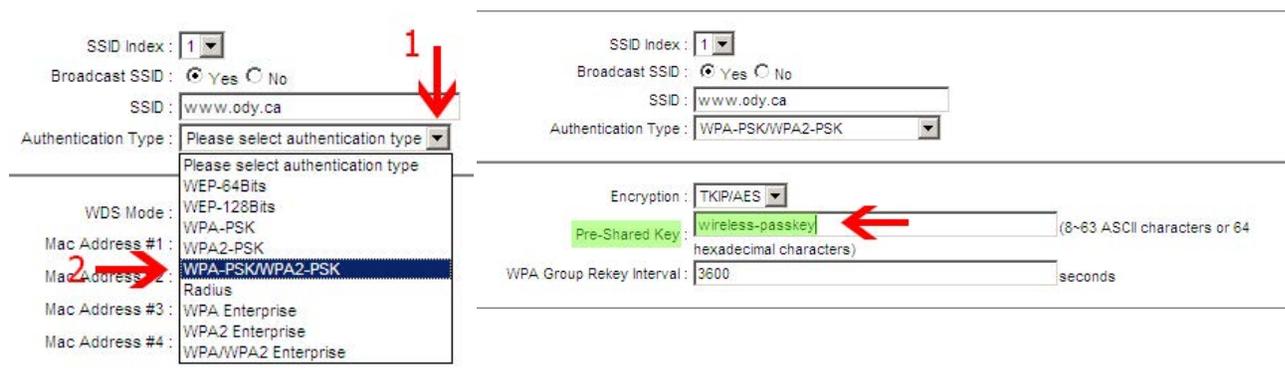

Note this for your records as this is what you will be using to connect wirelessly on all devices.

Step 3: Save Settings

If any changes were made, Hit 'Save' and the router will now broadcast the new information.

If no changes were made, skip this step and continue to connect wirelessly.




Optional: Change the "Network Name" or SSID

To change the current "Network Name" also known as the 'SSID'
Choose 'Interface Setup' on the top menu, then choose 'Wireless' on the sub menu.



To change the network name

In the 'SSID' textbox, erase the current and enter a new one.
Click 'Save' to apply and re-connect using the new SSID.

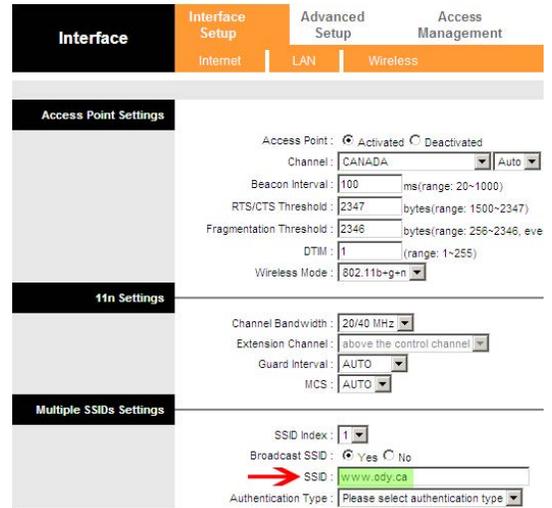

To connect/re-connect to the WiFi network:

Your device's operating system will vary on how specifically to scan for wireless networks.
To begin, scan for wireless networks, Your wireless network should be listed as an option, upon choosing the network your device may ask you for a password. Enter the password/key for the wireless router and connect.